



Pop-the-BANNER Premium

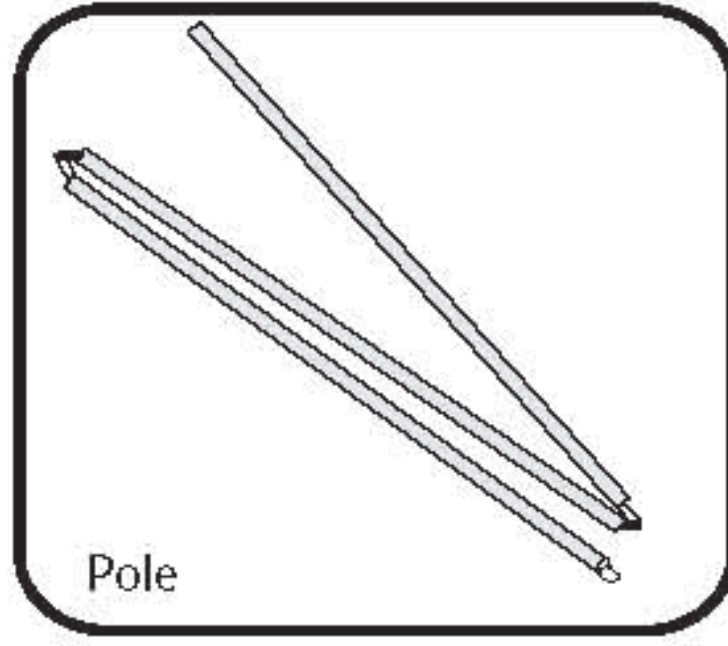


Correct

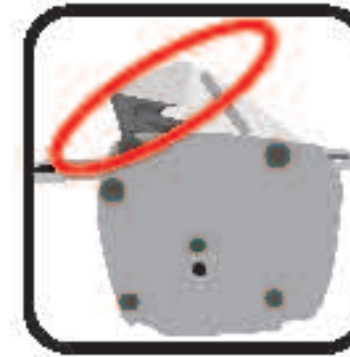


The print should be placed above the base as shown on the left. You should also see a small section of the print.


Wrong

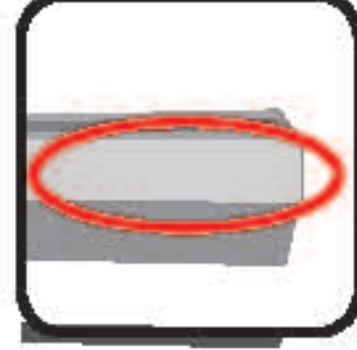


Assembly Guide

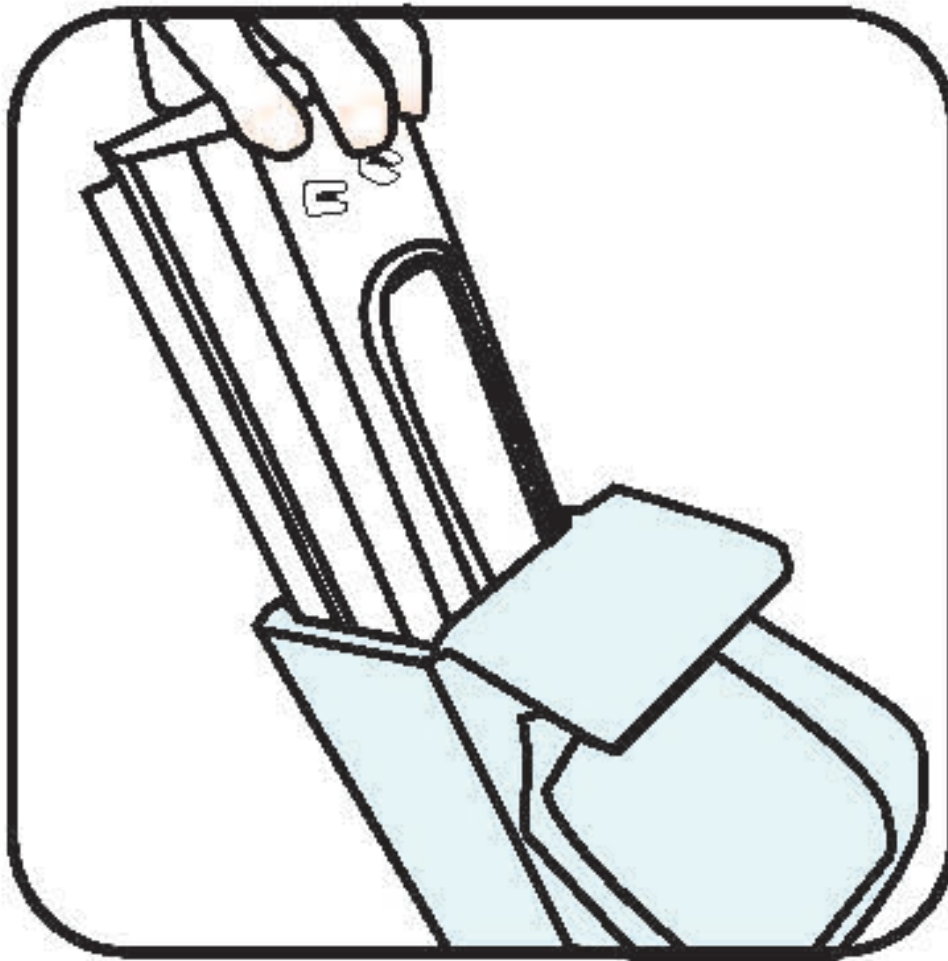


1. Remove the banner from the carry bag.

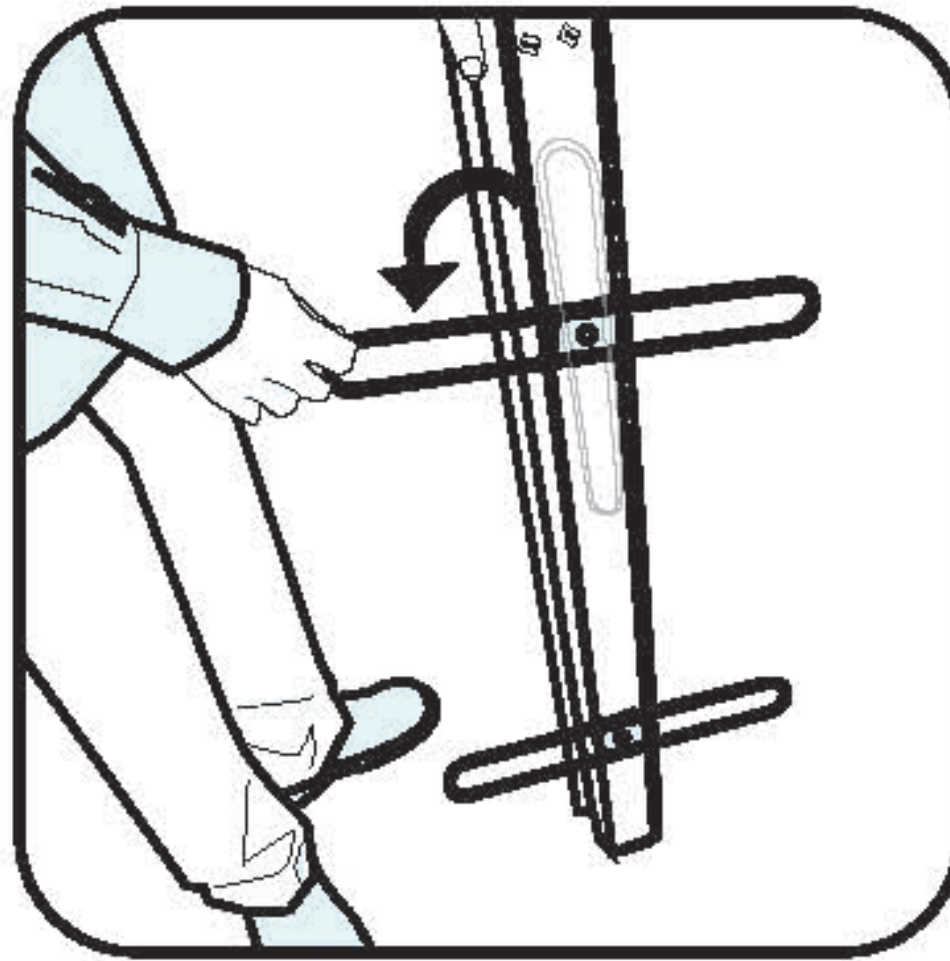


2. Rotate the feet 90 degrees.

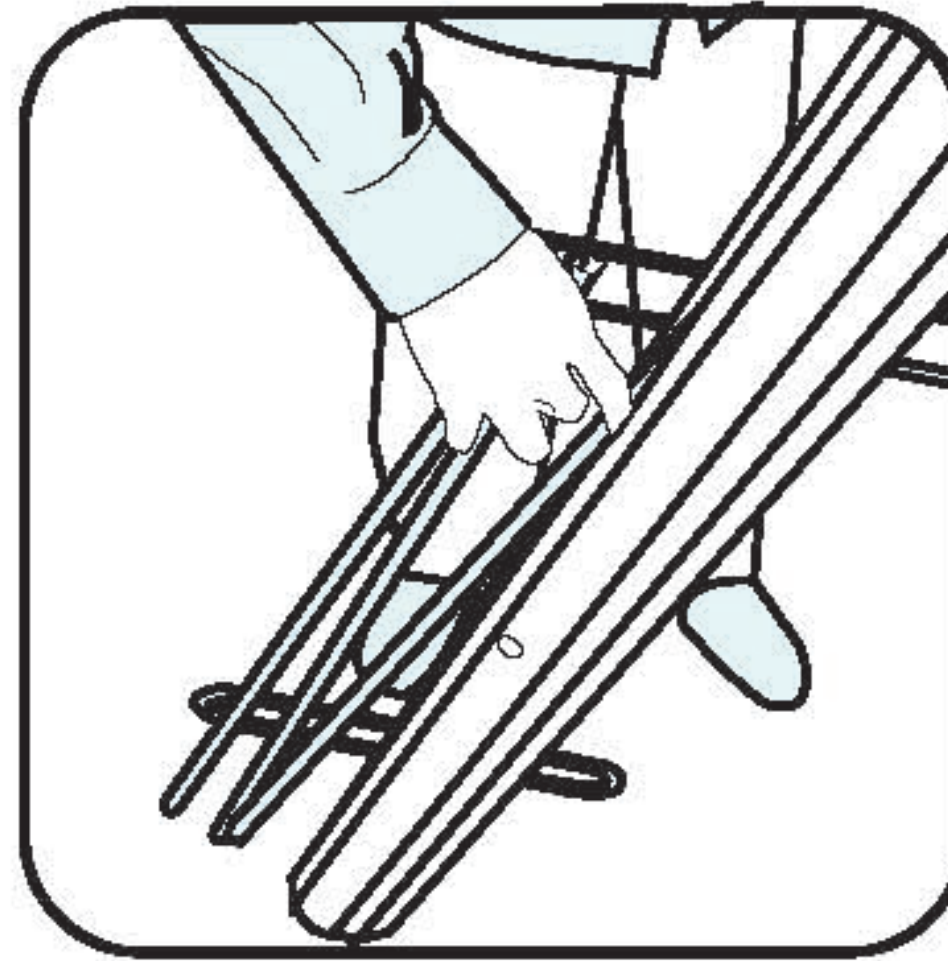

3. Take out the poles from the bottom of the banner.

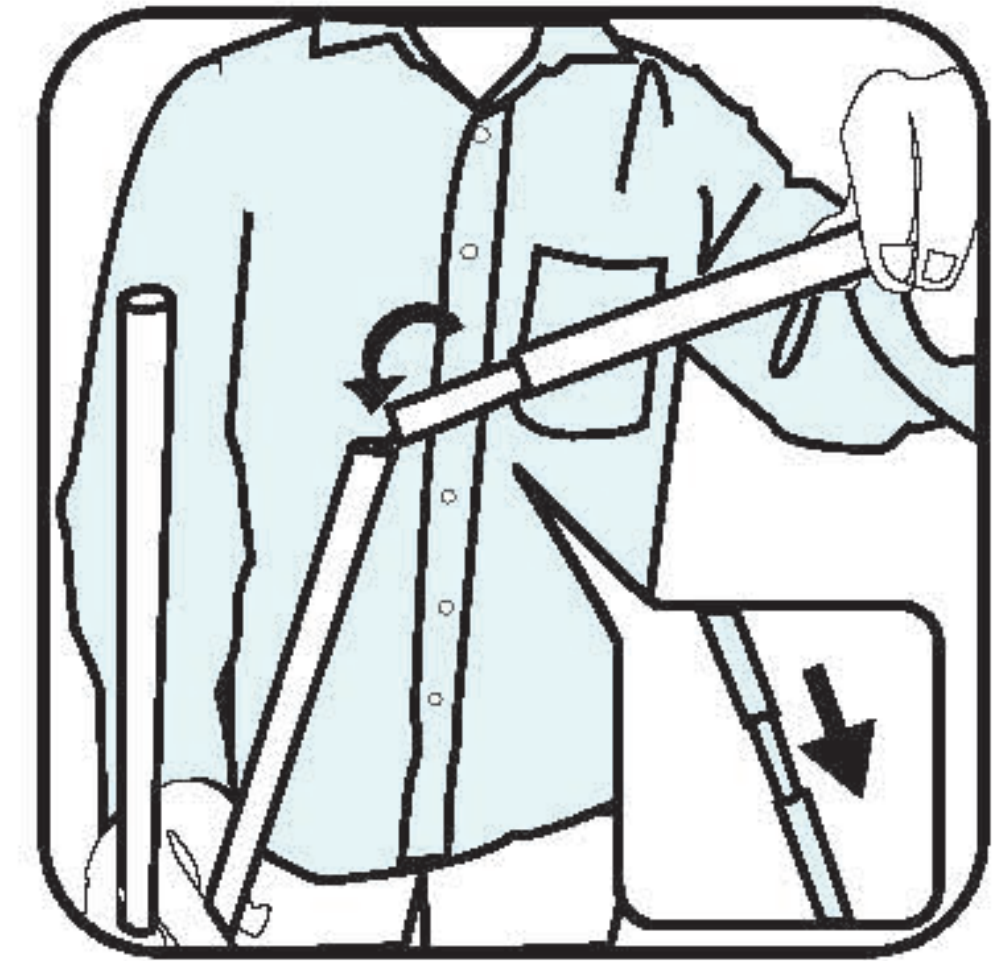


4. Connect the poles.

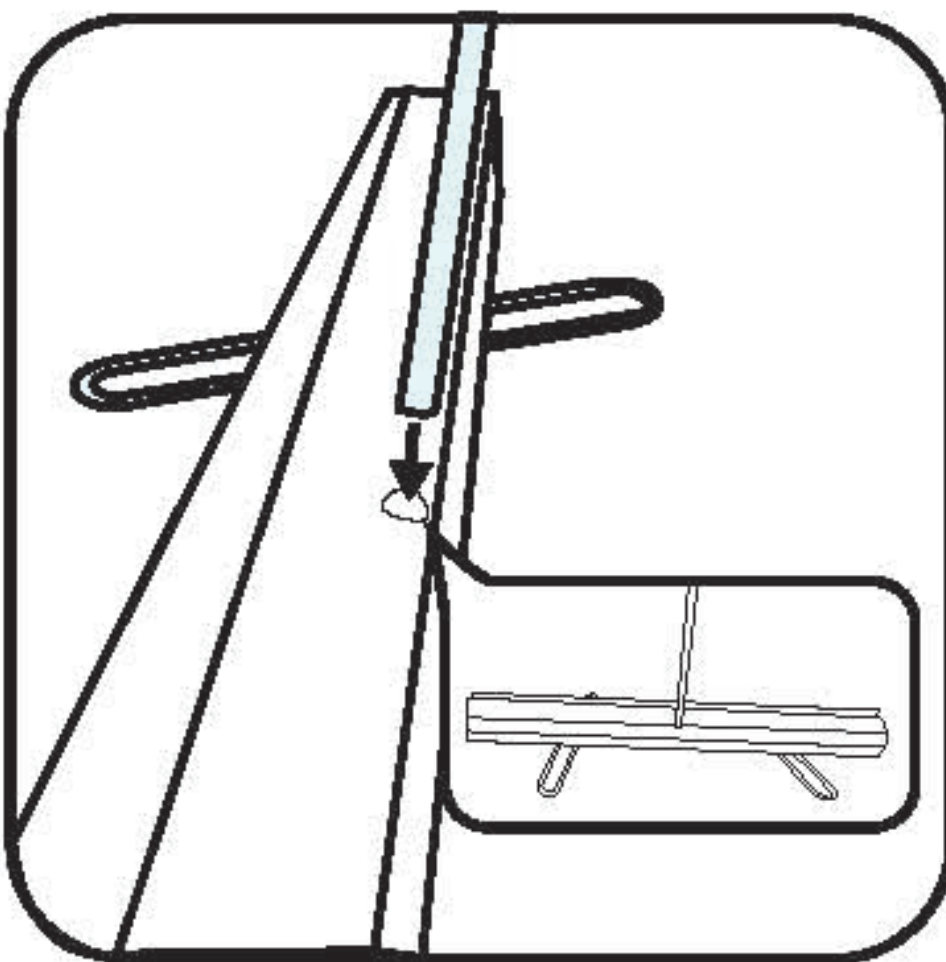


5. Insert the pole into the base of the banner system.



6. Make sure you step on the banner foot and pull up the banner with both hand.

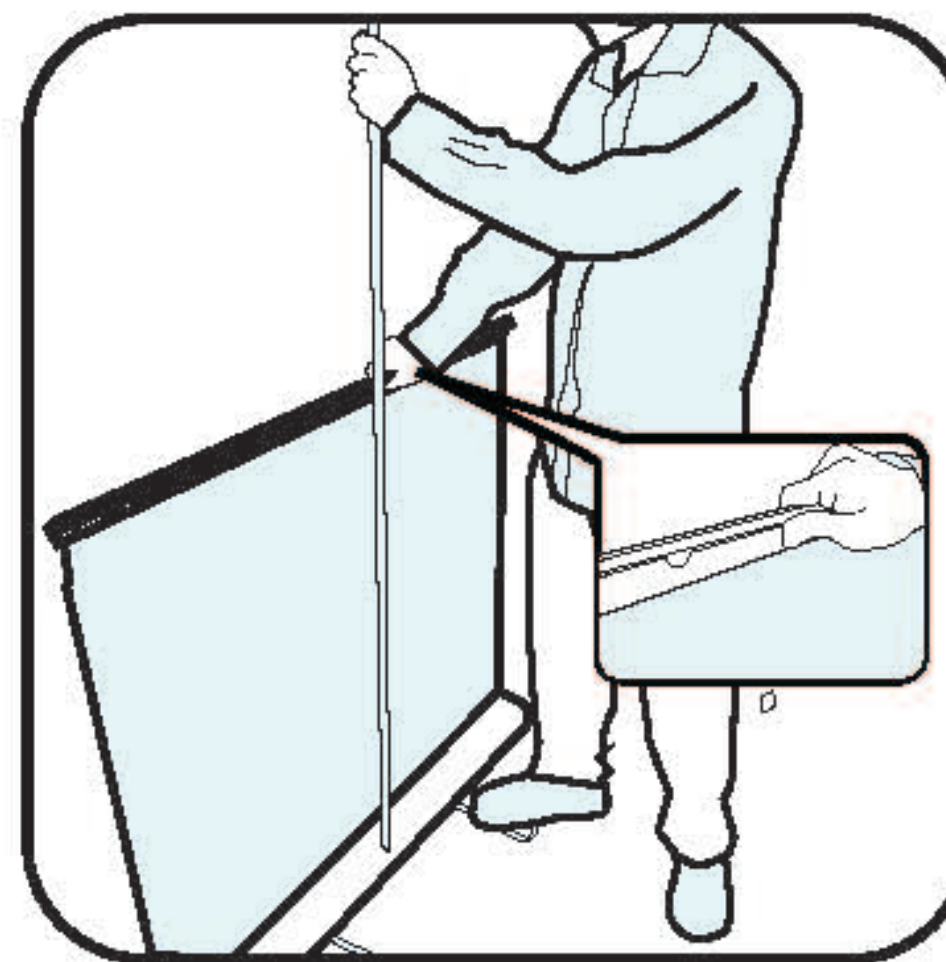

7. Pull up the print.

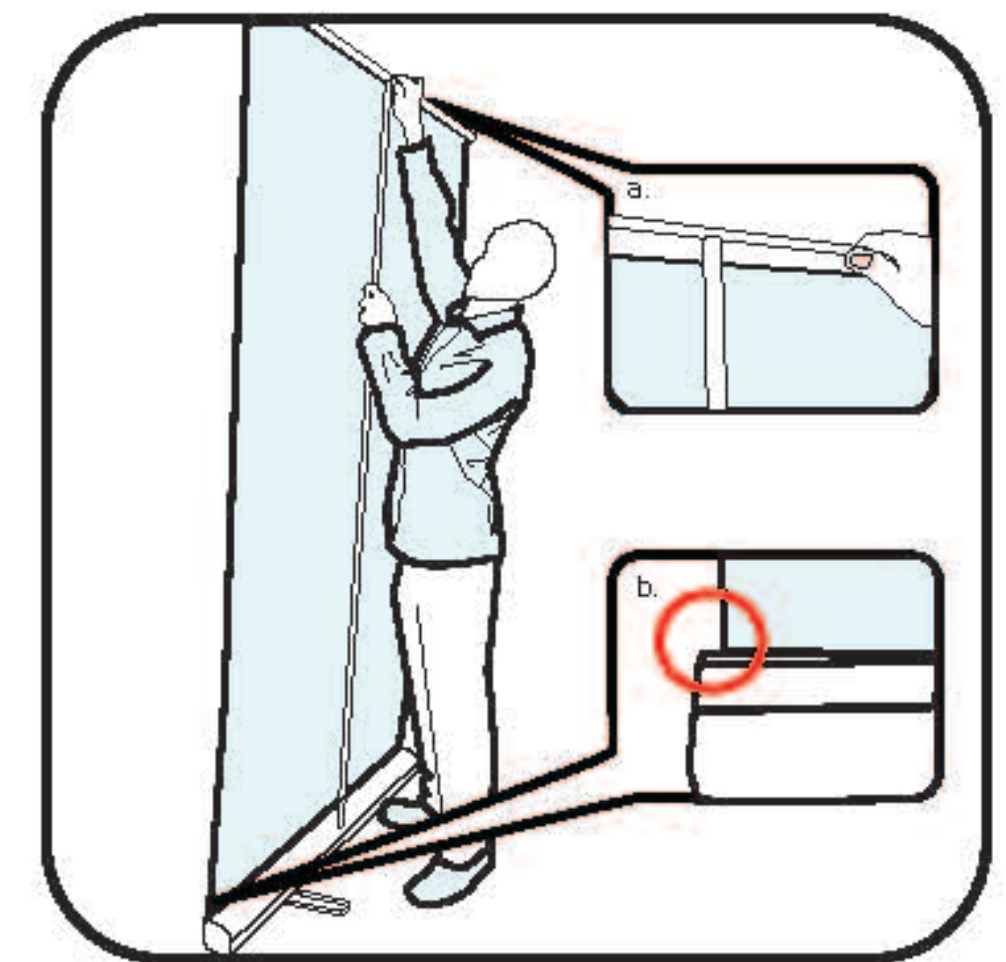


8. Hook the print on the pole top. (Diagram A)
The print should locate as diagram b.

Disassembly Guide




1. Unhook the print from the pole.

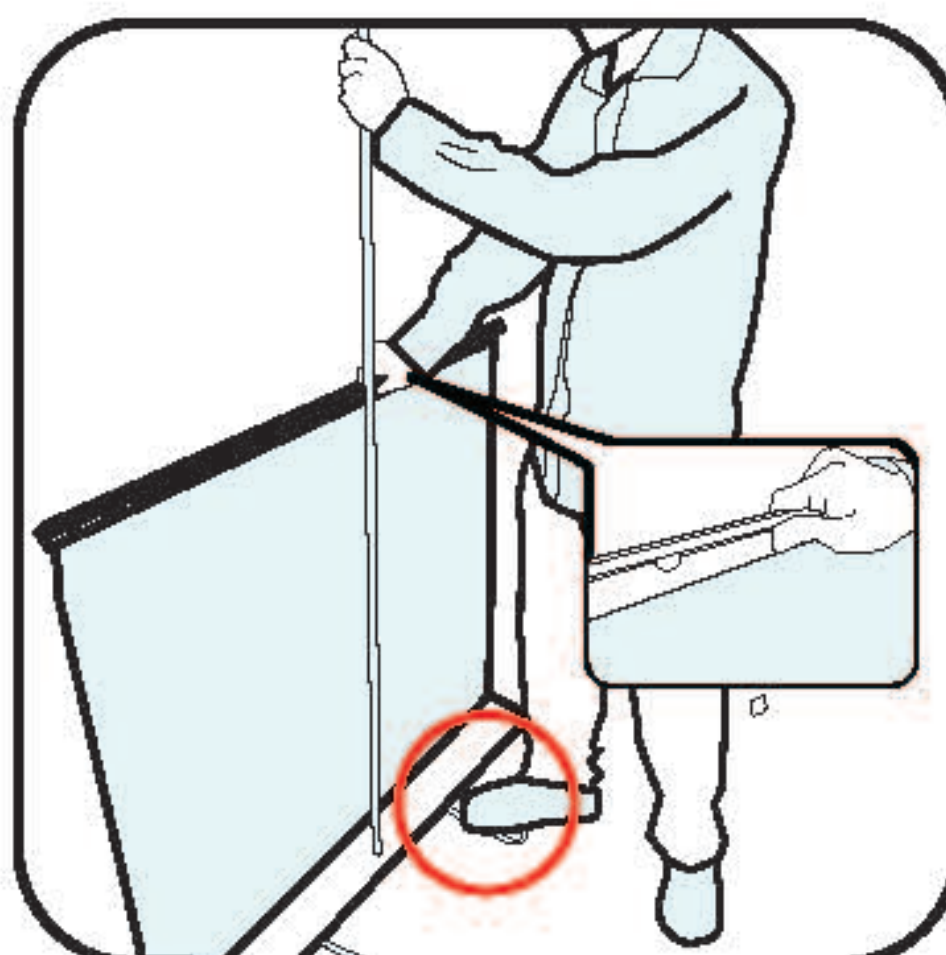


2. Hold the print. Make sure you step on the banner foot.




3. Retract the banner with both hands. Lock the print at the base.

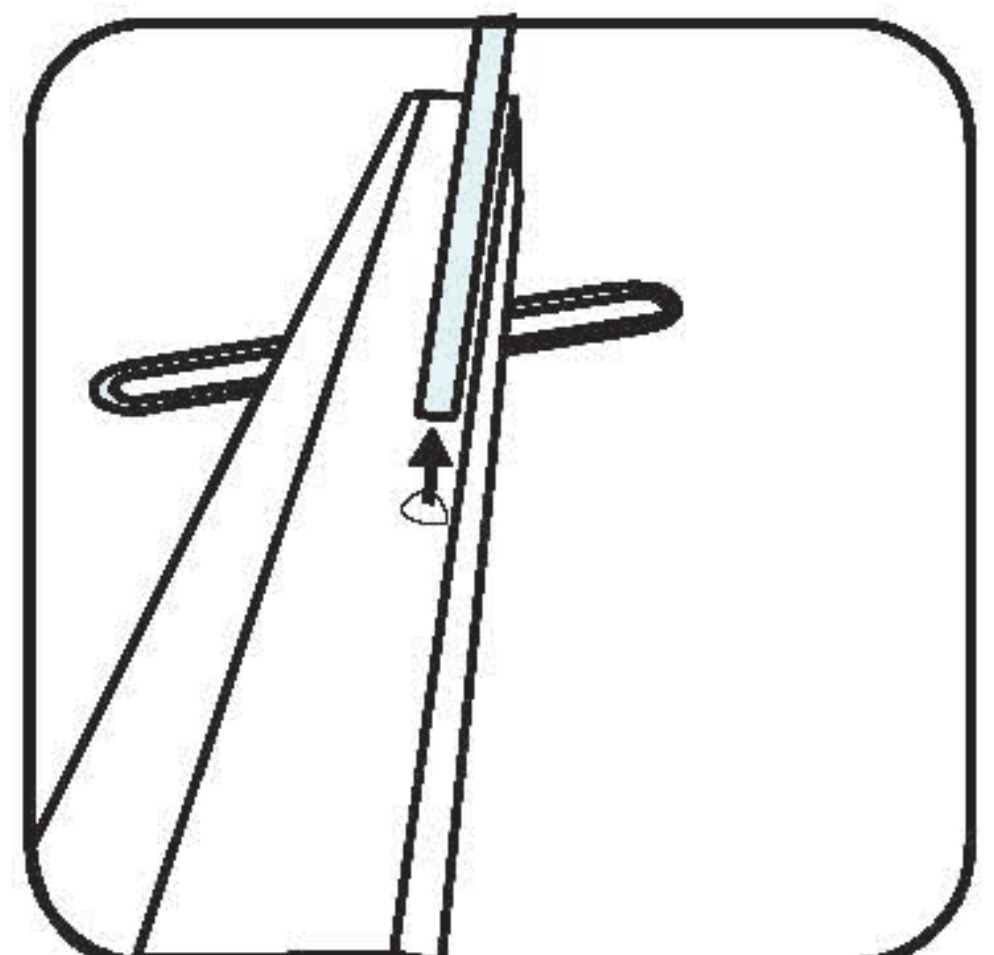


4. Remove the pole from the banner system.

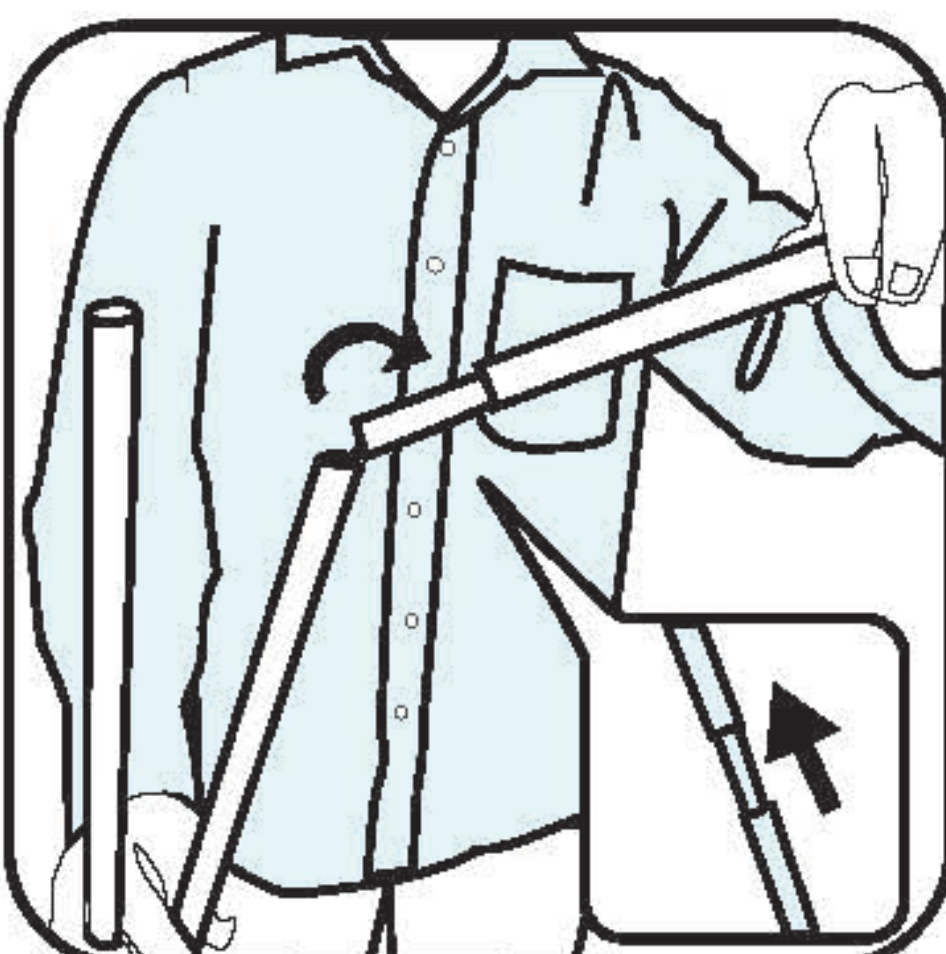


5. Separate the pole as shown above.

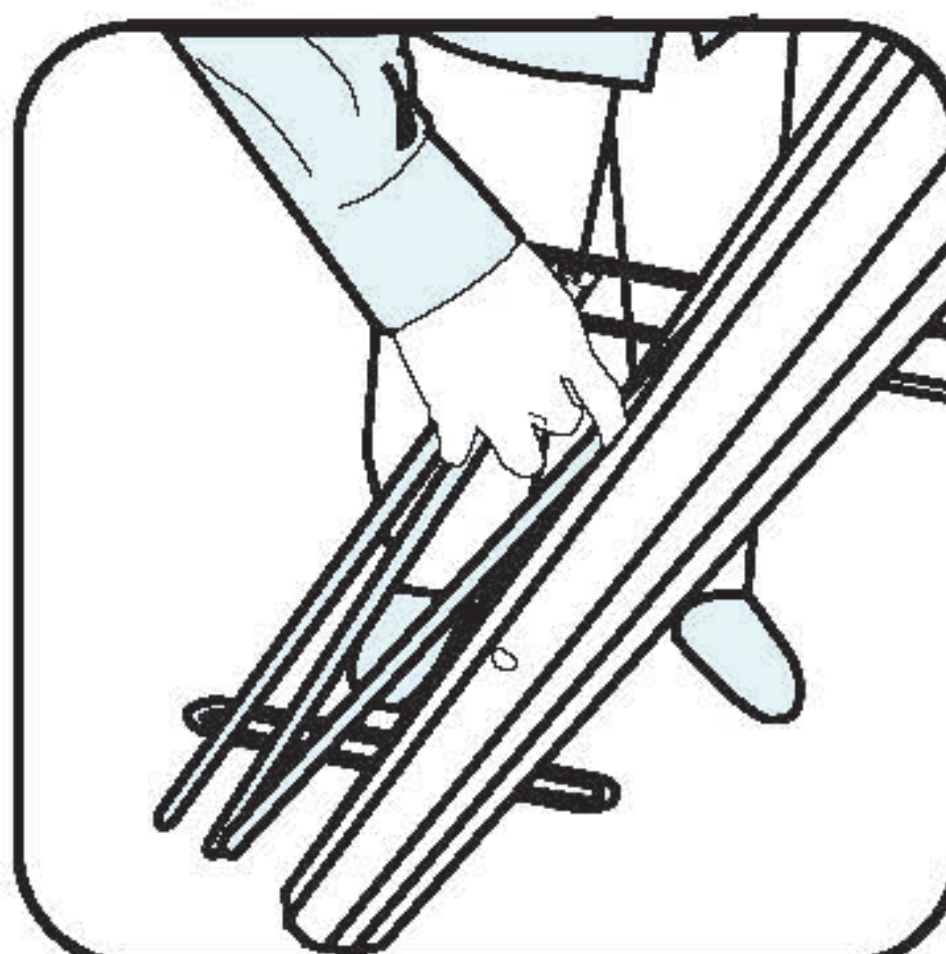

6. Put the poles back into the base of the banner.

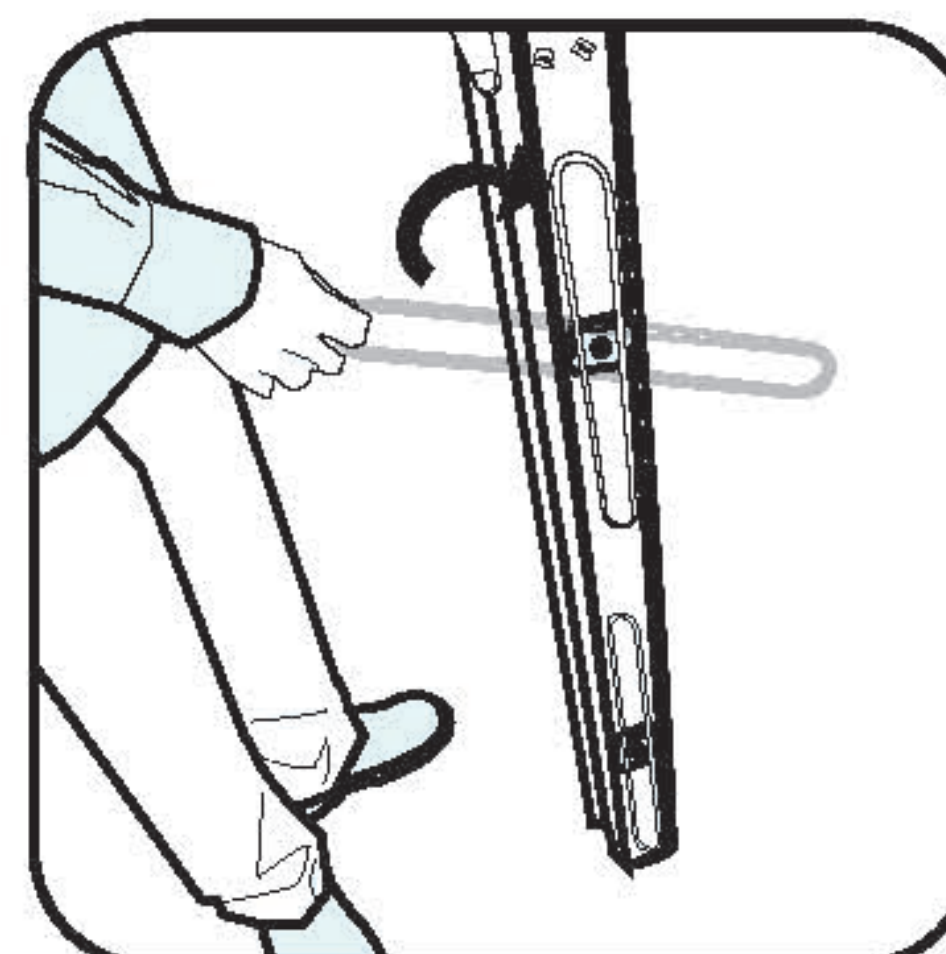

7. Rotate the feet 90 degrees.

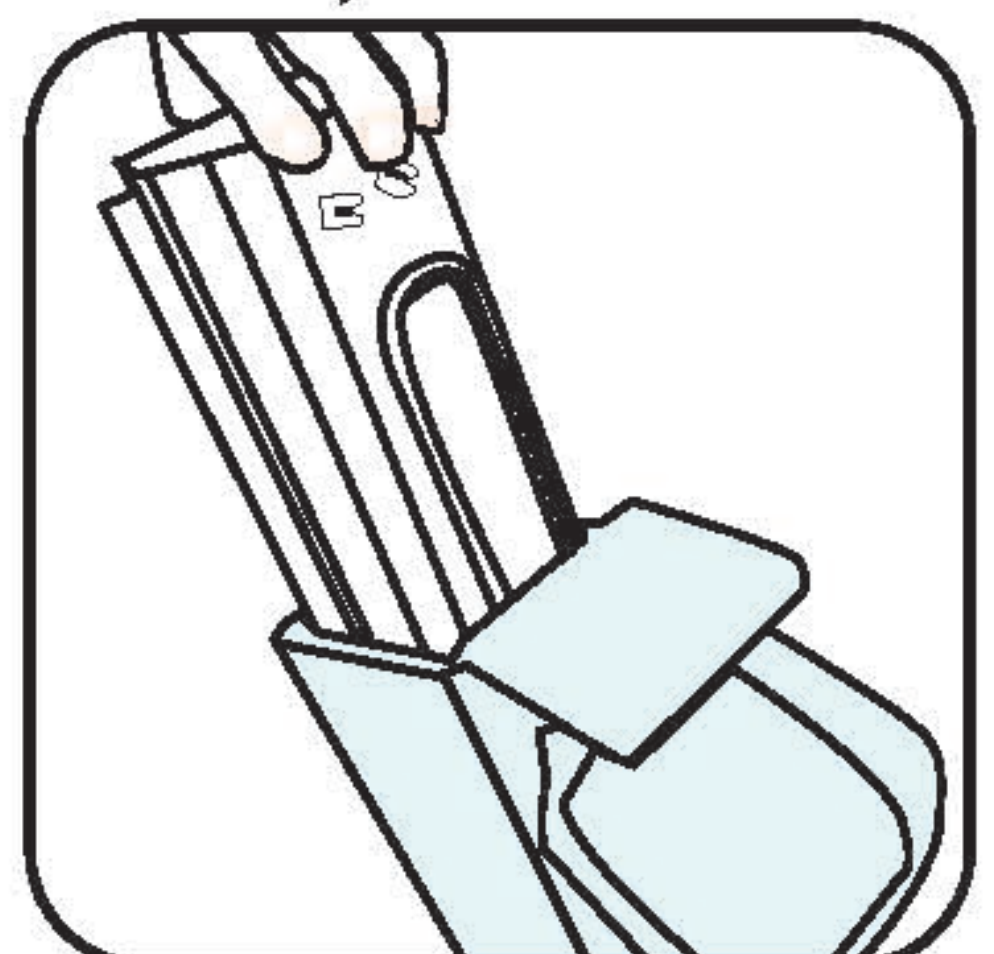

8. Stow the banner into the bag.